




1708

10 Characters Electronic Watch Instruction Manual

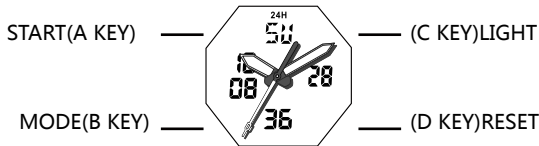


A.Features:

- ◆ 10 Digits LCD Display, Display Hour, Minute, Second, Month, Day and Week
- ◆ 12/24H format selectable, Auto Calendar.
- ◆ Daily Alarm and Chime hourly
- ◆ 1/100 second Chronograph with split functions.
- ◆ EL backlight

B.Operational Manual:

- ◆ Press B key to convert MODE:

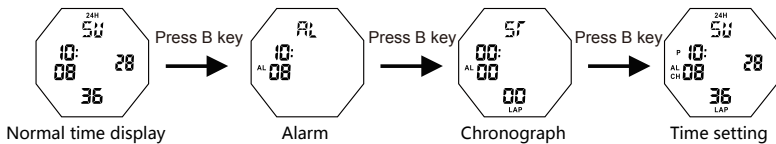

At any mode, press C key the EL back light on for 3 seconds.

C. Alarm & Chime ON/OFF:

- ◆ In normal mode, press B key once to enter Alarm mode, then press A to ON/OFF "ALM" "SIG" function.
- ◆ In normal mode, press B key once to enter Alarm mode, then press D key once, "Hour" flashing, press D key once again, "Minute" flashing, press A key, can adjust "Hour" and "Minute" respectively, press B key to normal mode.

D.Chronograph functions:

- ◆ In normal mode press B key twice Chronograph , Press A to start , Press A again to stop , Press D to zero , Press B to normal model

E.Time & date setting:

- ◆ In normal mode, press B three times enter into setting mode and the "Seconds" flashing, press D key, "Hour", "Minute", "Month", "Date", "Week" Flashing successively, Press C key can adjust: Time, Minute, Month, Date, Week. Press B key to normal mode.
- ◆ Press B to the clock mode.

F.Adjust Hands Time:

- 1.Pull-out crown to stop the second hands stop.
- 2.Rotate crown to settle time.
- 3.After settle the time, push the crown firmly to the normal location.

You can wear the watch when bathing and washing car.
But never push button in the water.